

INSTRUCTION MANUAL

DUAL HYDRAULIC BOOSTER 2 MEDIA HC2D2W



MINIMUM SIZE – MAXIMUM POWER

Index

1.0 General Information

1.1	Safety precautions - IMPORTANT -	3
1.2	Warranty	4
1.3	Serial number and identification plate location	4
1.4	Material certificate	5
1.5	Product description	5
1.6	Assembly drawing	6
1.7	Function diagram	7
1.8	Function diagram flow paths	8
1.9	Connections	9
1.10	Technical specifications	10

2.0 Accessories, Spare Parts and Optional

2.1	Connection adapters	11
2.2	Seal kit	12
2.3	Bolt kit	13
2.4	Tool kit	13

3.0 Maintenance and Repair

3.1	Introduction	14
3.2	Preparation	14
3.3	Seal replacement instruction	15

4.0 Installation and Initial Start-Up Procedure

4.1	Installing the miniBOOSTER HC2D2W	22
4.2	Preparations	22
4.3	Initial start-up procedure (after preparations are carried out)	23

5.0 Maintenance and Repair

5.1	Introduction	24
5.2	Inspection	24

6.0 Troubleshooting

6.1	Troubleshooting	25
-----	-----------------------	----

1.1- Safety Precautions - IMPORTANT -

Although the miniBOOSTER hydraulic intensifier has been designed with operator safety in mind, it still requires the operator to be vigilant upon use.

Therefore it should be observed that the below mentioned safety instructions are followed. Contact miniBOOSTER or your local miniBOOSTER distributor in case of any doubt.



Read all instructions, warnings and cautions carefully. Follow all safety precautions to avoid personal injury or property damage during system operation. miniBOOSTER cannot be held responsible for damage or injury resulting from unsafe use, lack of maintenance or incorrect product and/or system operation. Contact your miniBOOSTER distributor if in doubt as to the safety precautions and operations.



Eye protection must be worn while unpacking, installing, repairing and initial start-up of this miniBOOSTER product.



Gloves must be worn while unpacking, installing, repairing and initial start-up of this miniBOOSTER product.



The hydraulic system should always be de-pressurised before any couplings are disconnected. Check the integrity of connections before applying any hydraulic pressure.



Do not apply any hydraulic pressure to non-connected fittings.



Do not unscrew any nipples, couplings or fittings being under any hydraulic pressure.



Avoid sharp bends and kinks when routing hydraulic hoses.



Never exceed the maximum working pressure of the hydraulic system.



If the hydraulic system is under pressure **DO NOT STAND IN LINE** with any fittings, connections or other moving parts i.e. piston-rods and/or any other parts mechanically or hydraulically connected to the hydraulic



All hoses, couplings and fittings connected to the hydraulic system, including the miniBOOSTER, must be kept clean and free from debris and contamination at all times. Follow all instructions provided in this manual whenever installing, running and/or repairing the miniBOOSTER.

This instruction does not override any local safety regulations or relevant hazardous, regulations, which must always take precedence.

Never exceed the specified maximum pressure ranges, temperatures and flows.

Never put the component into operation until the machine, into which it is assembled, complies with all relevant directives and regulations in EU and EFTA.

miniBOOSTER® A/S cannot be held responsible for damage or injury resulting from unsafe use of the product, lack of maintenance, or incorrect product and system application.

If you have any doubts about precautions or applications, contact your local distributor, the manufacturer or visit www.minibooster.com

1.2 - Warranty

Never attempt to disassemble the booster or any other component from the system where it is not specifically described to do so. Any attempt will void the warranty if no consulting has taken place with miniBOOSTER.

DECLARATION OF CONFORMITY

We the manufacturer:

miniBOOSTER Hydraulics A/S
Fynsgade 3
DK 6400 Sønderborg
DENMARK

Declare that:

Hydraulic Intensifiers all types, variants and accessories are designed and manufactured in accordance with the below directives.

2006/42/EC Machinery Safety Directive
97/93/EC Pressure Equipment Directive where required (Max HPXVol >10,000)

The manufacturer miniBOOSTER® is ISO 9001 certified by Bureau Veritas (Certificate number DNKFRC10000046A). Each hydraulic intensifier has an identifiable serial number, stamped into its metal body. Year of manufacture and intensification factor are stamped into the metal body too. All technical documentation is drafted in accordance with the term "sound engineering practice", and in accordance with all of the processes and test procedures described in miniBOOSTER®'s process guides. All intensifiers are individually pressure tested prior to the EOL-approval.

1.3 - Serial Number and Identification Plate Location

Each individual miniBOOSTER HC2D2W can be identified by a unique serial number and its type code, which is stamped on the two flats at the H1 end of the miniBOOSTER housing.

The type number and the serial number are required when ordering spare parts (new seals) or repairs of the miniBOOSTER HC2D2W.



The example specifies:

Model	HC2D2W
22-11-057	Serial number (week-year-number)

Nomenclature:

HC2D2W	Booster model
3.0	$i = 3.0 : 1$
A	No dump valve
1	BSP ports
HH	Seal type

1.4 - Material Certificate

All body parts of the miniBOOSTER HC2D2W are marked with a material specification number, which provides materials traceability.

A material certificate verifies the origin batch numbers, the compositions and the test results of the materials used for the individual body parts. It is possible to order the certificates for the miniBOOSTER HC2D2W on request.



1.5 - Product Description

The miniBOOSTER HC2D2W is a dual media hydraulic intensifier. It is designed to use one media (media 1) to provide the energy to pressurise a second media (media 2).

The miniBOOSTER HC2D2W intensifier is available in several different intensification ratios to provide a wide range of flow and pressure capacities. It is manufactured of stainless steel and allows operation with several different mediums (including corrosive mediums) at a wide range of intensifying ratios.

The miniBOOSTER HC2D2W automatically compensates for the consumption of media 2 to maintain the HP set point.

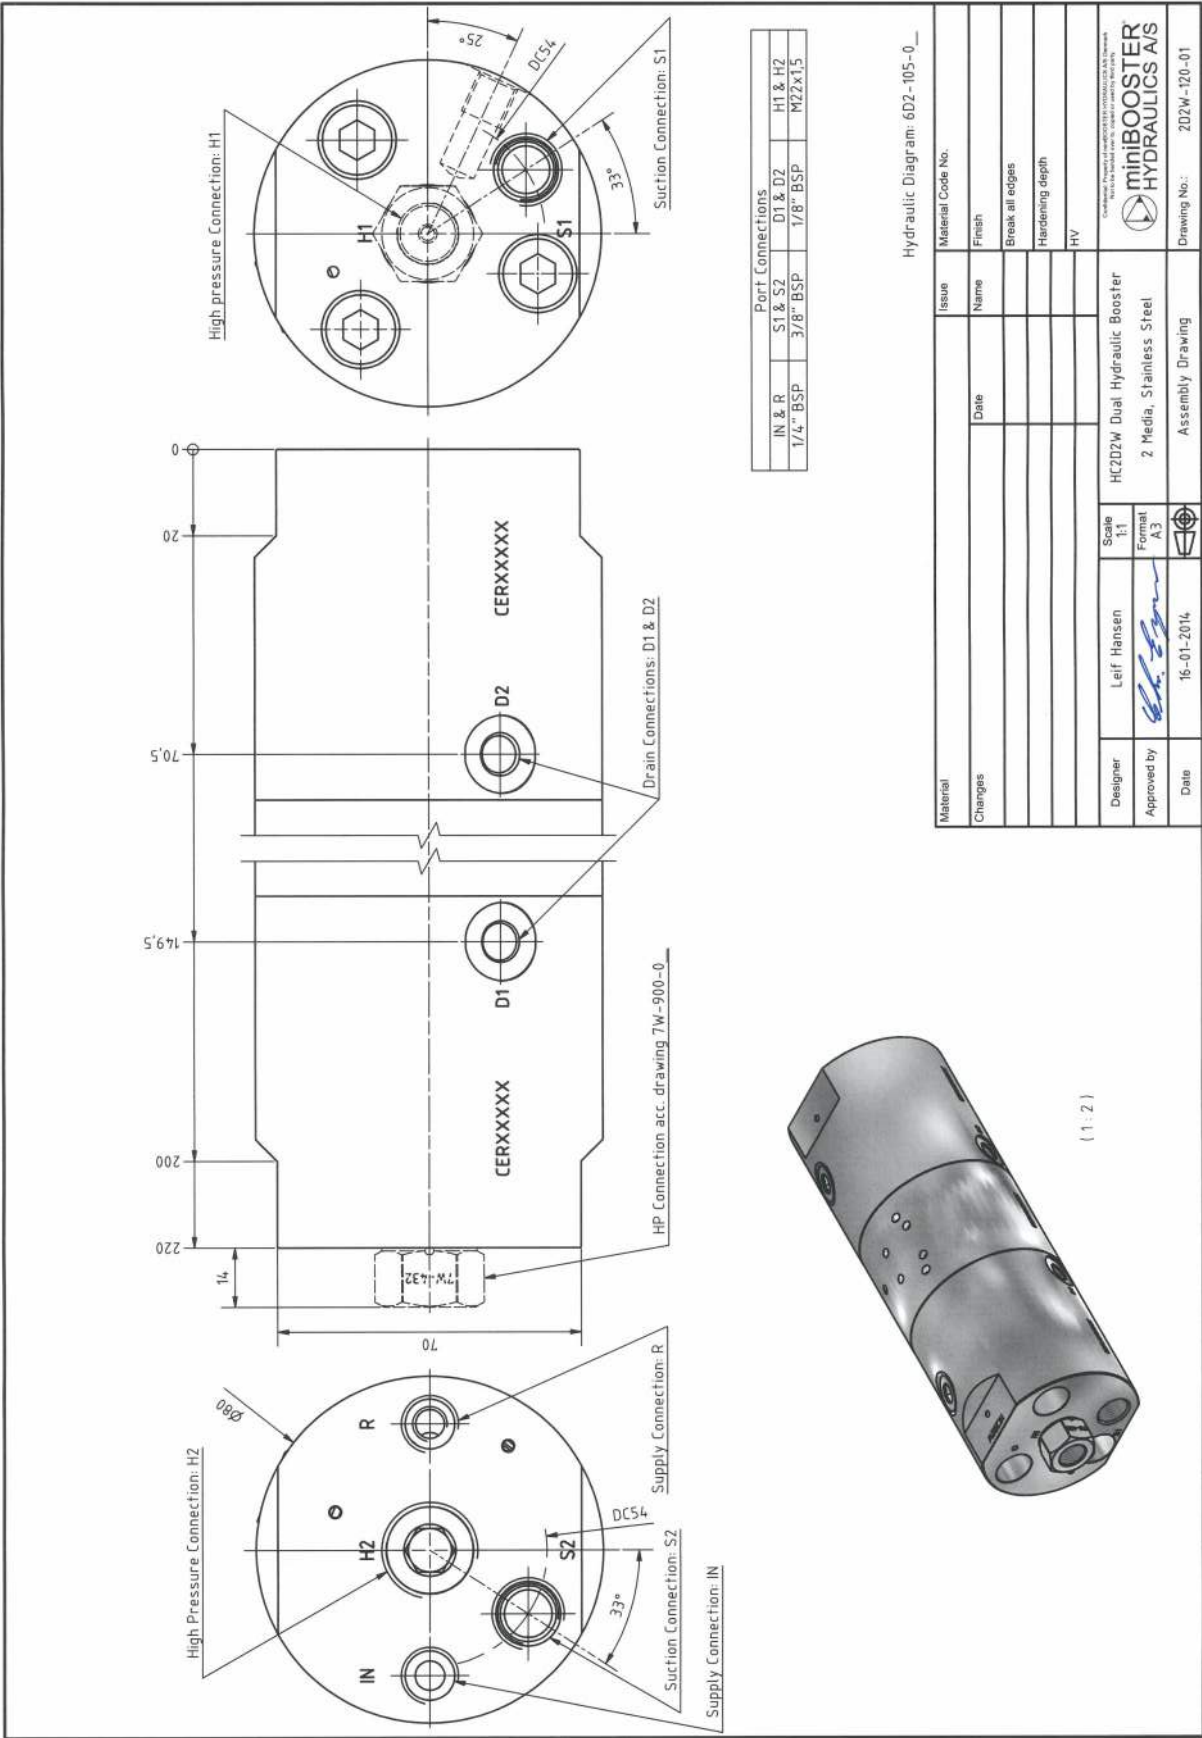
Adjusting the media 1 pressure controls adjusts the media 2 pressure proportionally to the intensification factor.

The miniBOOSTER is internally controlled by a built-in bistable valve assembly, which ensures a continuous flow of pressure-intensified media 2.

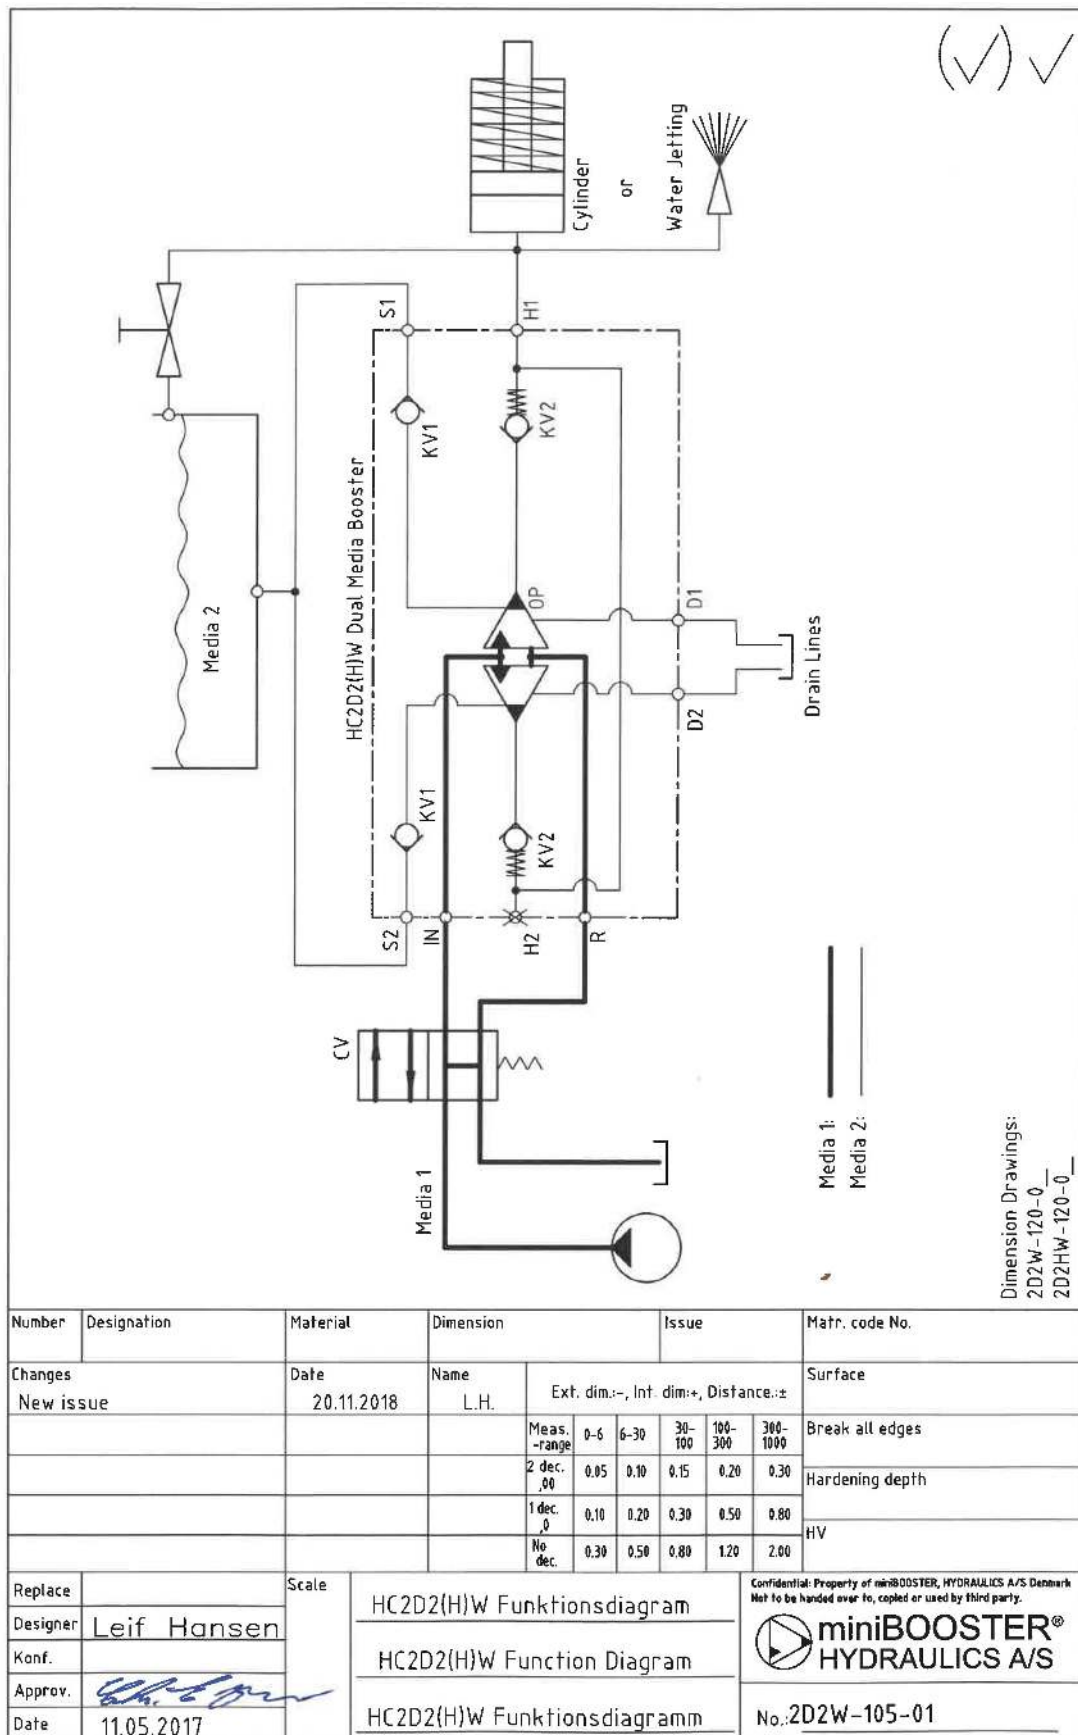
The miniBOOSTER HC2D2W is supplied with the following process connections: ¼" BSPP thread for the inlet and return line and a M22x1,5 thread for various HP adapters.

The miniBOOSTER HC2D2W is designed with a double seal system to prevent cross-contamination. The drain connections for the seals are BSPP 1/8".

1.6 - Assembly Drawing



1.7 - Function Diagram



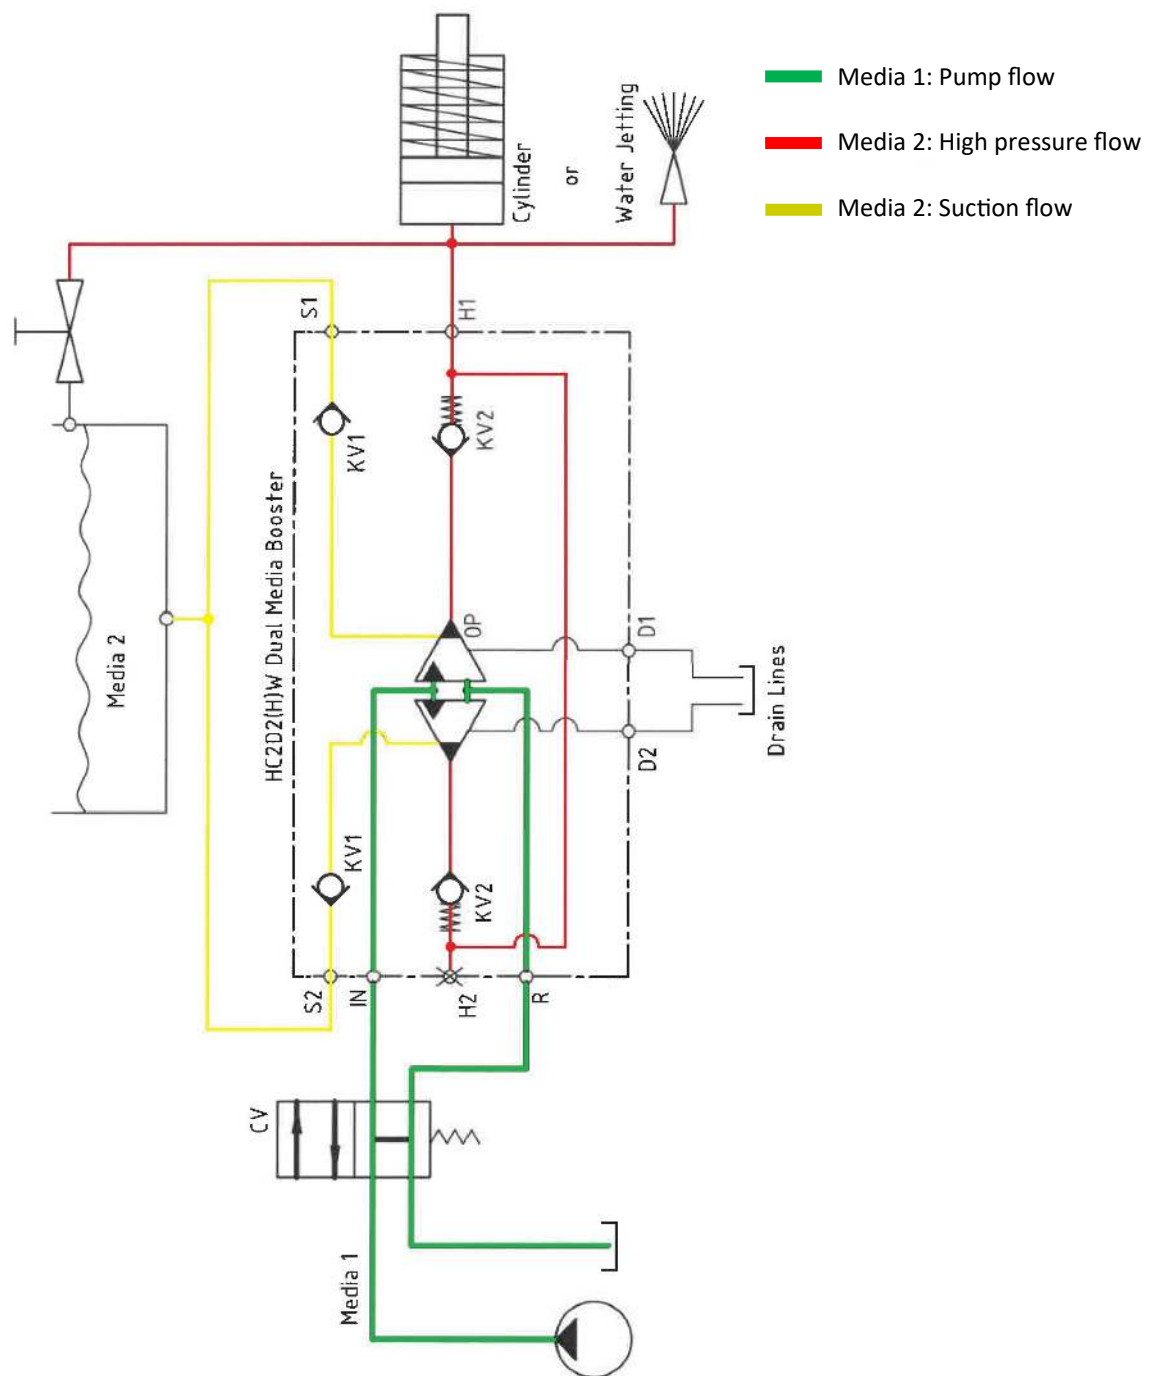
1.8 - Function Diagram Flow Paths

The basic operation of the miniBOOSTER HC2D2W intensifier is illustrated in the below function diagram.

Media 1 is fed through the IN-port flowing freely through the bistable valve (BV1), which in turn drives the LP/HP piston assembly. From both of the suction inlets (S1 and S2), media 2 is drawn through the inlet check valves (KV1) and pumped through the high pressure check valves (KV2) to the high pressure outlet H1 (alternatively H2)

The intensifier will automatically stall when the end pressure on the high-pressure side (H) is reached.

If a pressure drop occurs on the high-pressure side, due to a consumption of media 2 or due to a leakage from the system, the bistable LP/HP piston assembly will automatically start oscillating, thus maintaining the intensified pressure (H).

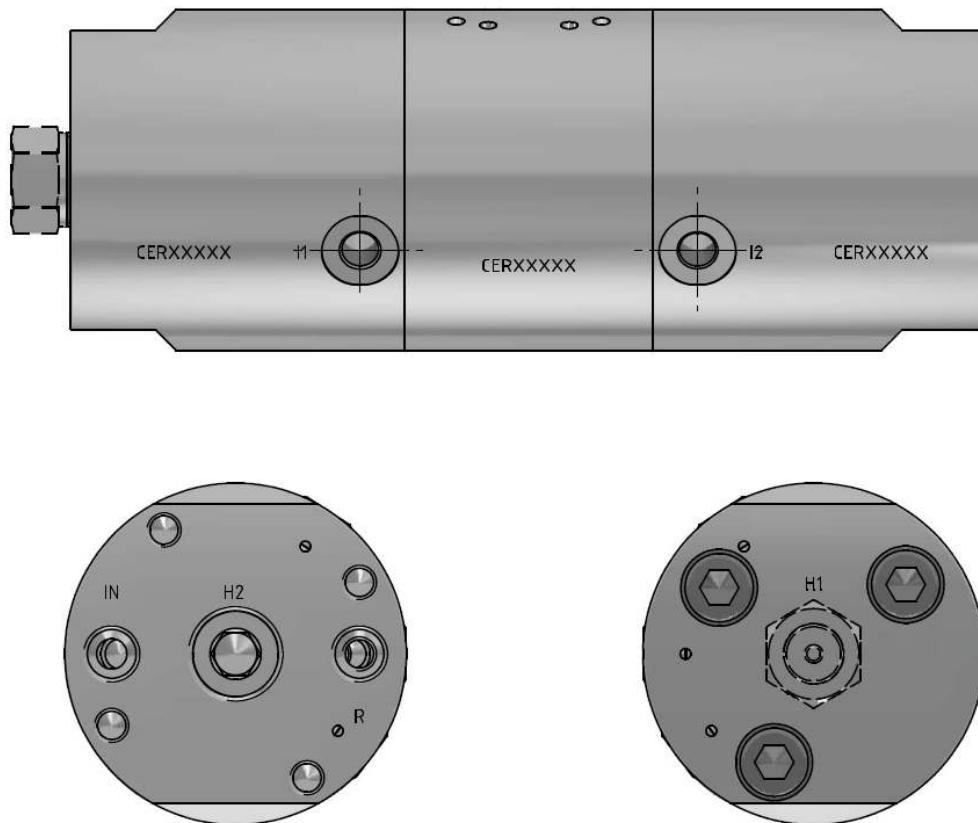


1.9 - Connections

The miniBOOSTER HC2D2W is supplied with 8 threaded connection bores.

All connections are clearly marked/stamped into the body of the miniBOOSTER and could thus be easily identified.

IN	Inlet pressurized media 1
R	Return outlet media 1
H1	High pressure outlet media 2
H2	Optional high pressure outlet media 2 (plugged from manufacturer)
S1	Suction media 2
S2	Suction media 2
D1	Seal drainhole media 1 and 2 (when seals have become worn or defective!)
D2	Seal drainhole media 1 and 2 (when seals have become worn or defective!)



1.10 - Technical Specifications

Model	HC2D2W	
Weight	8 kg / 17,6 lbs	
Pressure Ranges		
Inlet pressure (media 1)	IN	20 - 207 bar / 290 - 3,000 psi
Outlet pressure max. (media 2)	H1 and H2	800 bar / 11,600 psi as standard
Return (media 1)	R	As low as possible.
Temperature Ranges		
Media oil	-40°C to +70°C / -40°F to +158°F	
Media water	+3°C to +50°C / +37°F to +122°F	
Stroke Ranges		
Continuous	> 5 minutes	from 1 to maximum 500 strokes/minute
Intermittent	< 5 minutes	from 1 to maximum 600 strokes/minute
Materials of Construction		
Body	316L stainless steel	
Pistons	Coated stainless steel	
Check valves	316L stainless steel	
Static seals standard	Nitrile NBR (other seal systems available as option)	
Dynamic LP and HP seals standard	H-ECOPUR (other seal systems available as option)	
Connections		
IN and R	¼" BSPP	
S1 and S2	⅜" BSPP	
D1 and D2	⅝" BSPP	
H1 and H2	M22 x 1.5 (see section 2.1 for available HP adapters)	
Fluids		
Media 1	Recognized hydraulic fluids, freshwater	
Media 2	Hydraulic fluids, freshwater, seawater	



For other mediums such as methanol etc. please contact your miniBOOSTER® distributor .

Filtration recommendations media 1 (media 2 at least 40 Micron).

		0-140 BAR (0-2,000 psi)		141-207 BAR (2,000-3,000 psi)	
Media		ISO 4406 Scale number	Micron rating	ISO 4406 Scale number	Micron ratings
Oil	≥ 5 cSt	19/17/14	10	18/16/13	5
Freshwater	≤ 5 cSt	18/16/13	5	17/15/12	3



Mediums not filtered in accordance with the recommendations given in this chapter may be the reason to severe damage of the HC2D2W.

2.1 - Connection Adapters

miniBOOSTER offers a wide program of adapters enabling the HC2D2W to be installed into most hydraulic systems. For further information, please contact your local miniBOOSTER distributor, or visit www.minibooster.com

List of available connection adapters:

M22x1,5 HP adapters (for HC2D2W / HC7W)		
Ordering Code	HP Connection (female)	Max. Pressure
7W-430	3/4"-16 UNF	2.000 bar/ 29,000 psi
7W-432	9/16-18 UNF	2.000 bar / 29,000 psi
7W-433	1/4" BSPP	2.000 bar / 29,000 psi
7W-436	M16x1,5	2.000 bar / 29,000 psi
7W-439	1/4" BSPP	800 bar / 11,600 psi
7W-444	1/2" BSPP	2.000 bar / 29,000 psi
7W-446	9/16-18 UNF (3/8 MP)	1.380 bar / 20,000 psi
7W-448	1 1/8"-18 UNF (9/16 HP)	2.000 bar / 29,000 psi
7W-451	1/4" NPT	1.035 bar / 15,000 psi
7W-452	7/16-20 UNF (1/4 MP)	1.380 bar / 20,000 psi

2.2 - Seal Kit

Complete seal kits are available for the miniBOOSTER HC2D2W. Seals should be replaced whenever media 1 or media 2 is leaking from connection D1 or D2 (more than 8 drops/min) or as part of a routine maintenance procedure. A seal kit contains a complete set of seals and an assembly drawing of the seal assembly.



Seal kit

Intensification factor	Item number HH type	Item number HE type	Item number HP type	Item number EE type	Item number EP type
1.2	SEALKIT-2D2W-1.2HH	SEALKIT-2D2W-1.2HE	SEALKIT-2D2W-1.2HP	SEALKIT-2D2W-1.2EE	SEALKIT-2D2W-1.2EP
1.6	SEALKIT-2D2W-1.6HH	SEALKIT-2D2W-1.6HE	SEALKIT-2D2W-1.6HP	SEALKIT-2D2W-1.6EE	SEALKIT-2D2W-1.6EP
2.2	SEALKIT-2D2W-2.2HH	SEALKIT-2D2W-2.2HE	SEALKIT-2D2W-2.2HP	SEALKIT-2D2W-2.2EE	SEALKIT-2D2W-2.2EP
3.0	SEALKIT-2D2W-3.0HH	SEALKIT-2D2W-3.0HE	SEALKIT-2D2W-3.0HP	SEALKIT-2D2W-3.0EE	SEALKIT-2D2W-3.0EP
4.0	SEALKIT-2D2W-4.0HH	SEALKIT-2D2W-4.0HE	SEALKIT-2D2W-4.0HP	SEALKIT-2D2W-4.0EE	SEALKIT-2D2W-4.0EP
5.6	SEALKIT-2D2W-5.6HH	SEALKIT-2D2W-5.6HE	SEALKIT-2D2W-5.6HP	SEALKIT-2D2W-5.6EE	SEALKIT-2D2W-5.6EP
8.0	SEALKIT-2D2W-8.0HH	SEALKIT-2D2W-8.0HE	SEALKIT-2D2W-8.0HP	SEALKIT-2D2W-8.0EE	SEALKIT-2D2W-8.0EP
12.0	SEALKIT-2D2W-12.0HH	SEALKIT-2D2W-12.0HE	SEALKIT-2D2W-12.0HP	SEALKIT-2D2W-12.0EE	SEALKIT-2D2W-12.0EP



Important notice!

The HE, EE and the EP type seals are made from materials, which do not withstand the solvent properties from most types of oil. These seals swell and become inefficient when exposed to oil.

Under NO circumstances should intensifiers assembled with HE, EE or EP type seals be internally exposed to oil on the media 2 side.

2.3 - Bolt Kit

Complete bolt kits, containing special bolts and washers, are available for the miniBOOSTER HC2D2W.



Body bolts part number. [HC2D2W-BOLTKIT](#)



Recommendation! Replace old bolts and washers with new ones whenever seals are changed.

2.4 - Tool Kit

A complete tool kit, including all the needed tools required to change the seals at routine maintenance, is available for the miniBOOSTER HC2D2W.



Tool kit part number. [HC2D2W-TOOLKIT](#)

Note! The tool kit includes customised tools, which are only available from miniBOOSTER.

3.1 - Introduction

The miniBOOSTER HC2D2W intensifier has been designed and is manufactured to provide reliable service over a range of demanding applications. The intensifier does not require special maintenance.

As noted earlier, to provide extended service life, ensure that the unit is operated within specifications and, in particular, fluid quality. Please refer to section 1.10 Technical Specifications for additional information.

The miniBOOSTER HC2D2W is designed with field serviceable seals. In the event of a seal failure, the following procedure should be followed closely. For repairs other than seal replacement, it is recommended the intensifier be returned to the factory.

3.2 - Preparation

The miniBOOSTER should only remain unplugged and disassembled in a very clean and tidy workshop environment. No particles larger than 10 Micron should possibly be allowed to enter the miniBOOSTER HC2D2W in any way.

Ensure that a clean, flat working space is used and that the following tools and supplies are available before beginning repairs:

Tools:

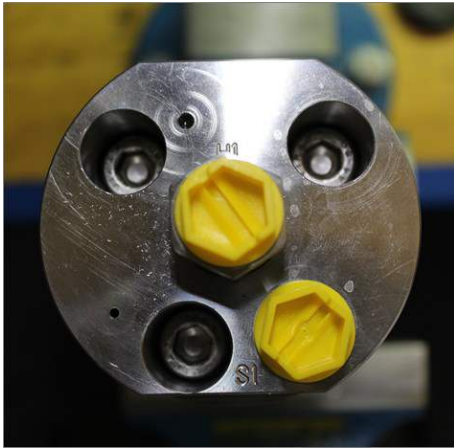
1. Bench-mounted heavy-duty vise with soft face jaws and a maximum opening of at least 70 mm / 2.75"
2. Roll of lint-free cloth or paper wipes
3. Tube of Foodlube multi-paste (anti-seize pasta) (Rocol[®])
4. Tube of silicone based O-rings grease
5. $\frac{3}{8}$ " torque wrench, 70 Nm / 52 ft-lbs
6. $\frac{3}{8}$ " Socket Allen Key, 6 mm
7. Adjustable face spanner, $\varnothing 2$ mm / 5/64" pin diameter

RECOMMENDED! miniBOOSTER Tool kit, HC2D2W-TOOLKIT (see section 2.4)

Spare Parts:

1. Seal Kit (see section 2.2)
2. Bolt Kit (see section 2.3)

3.3 - Seal Replacement Instruction



3.3.1

Clean the exterior of the miniBOOSTER HC2D2W thoroughly before it is taken to the workshop.

Make sure that the warranty void sealant is removed from all 3 M10 HEX bolt heads.



Follow the provided instructions carefully. Failure to comply with the instructions could result in equipment damage and personal injury. The miniBOOSTER HC2D2W should only be disassembled, have the seals changed and be reassembled in one end at a time.



3.3.2.

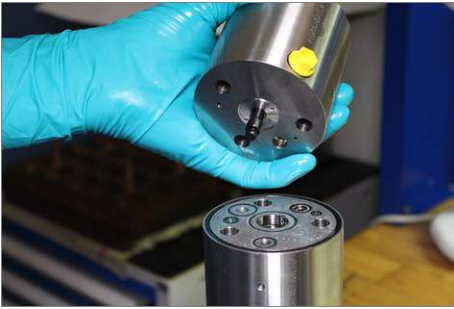
Secure the HC2D2W vertically in a vice between soft jaws clamping and on the flat ends. If soft jaws are not available use cloth or cardboard instead as to protect the surface of the intensifier.

To easen the re-assembly, it is recommended to draw position lines with a marker between the middle- and the end parts.

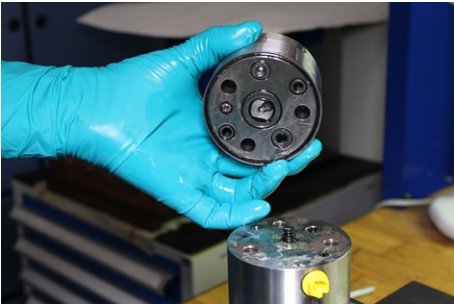


3.3.3

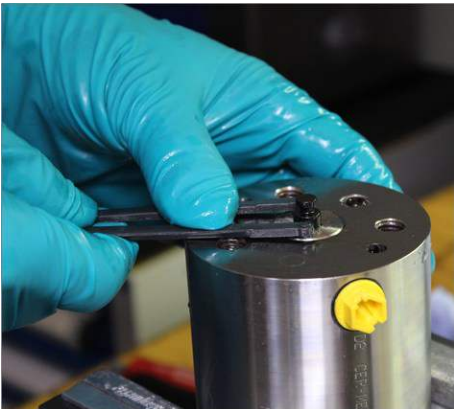
Loosen and remove the 3 HEX bolts.

**3.3.4**

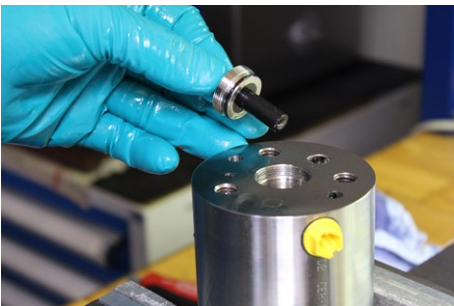
Remove the upper part.

**3.3.5**

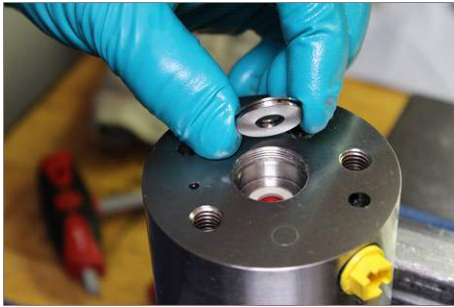
Remove the middle part. Be careful not to drop the piston located in the middle of the part.

**3.3.6**

Loosen and remove the seal lock nut.



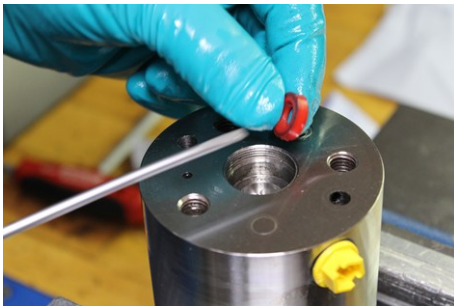
If the surface of the pistons or the piston cylinders have any visible surface imperfections, the intensifier **will not** operate properly. The unit should be returned to the factory for refurbishment. If reassembled with such damaged parts, the intensifier may operate with a reduced effective intensification ratio, for a while, but will generally fail after a short period of operation and may no longer be serviceable.

**3.3.7**

Remove the seal support ring
(Note: no O-rings on this part!)

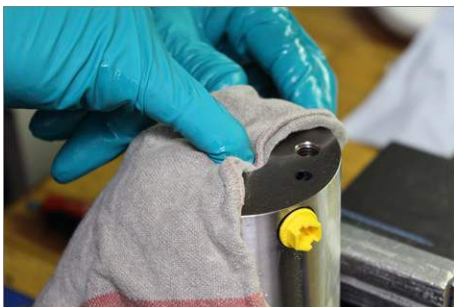
**3.3.8**

Remove the backup ring.

**3.3.9**

Remove the old seal.

Be careful not to scratch the surface
where the seal is located.

**3.3.10**

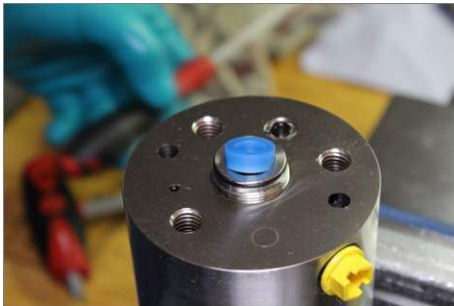
Clean off the seal bore with a lint free
cloth and blow with compressed air.
Also clean the seal support ring and
seal lock nut.

**3.3.11**

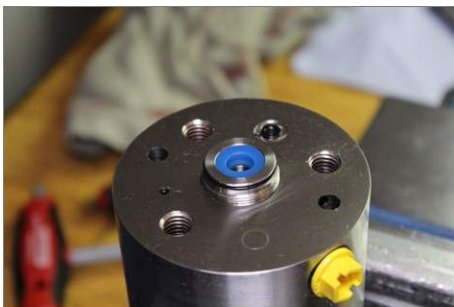
Reassemble with new seals in reverse
order, in accordance to the
Instructions drawing supplied with
the seal kit.

**3.3.12**

Use the booster end part as a vise for the lock nut and mount it in reverse like shown on the picture.

**3.3.13**

Install the new seal (blue on photo) and the new O-ring in the groove on the lock nut.

**3.3.14**

Reassemble the lock nut into the end part.

When the nut is under the surface level of the end part, DO NOT tighten it any further. DO NOT use excessive force to tighten the nut.

**3.3.15**

Checking to see that the nut is below level of the end part.



miniBOOSTER is continuously developing and improving their products. Material appearances may vary slightly from the illustrations. Please contact your distributor or the factory if you have any questions or concerns about the procedure or parts.

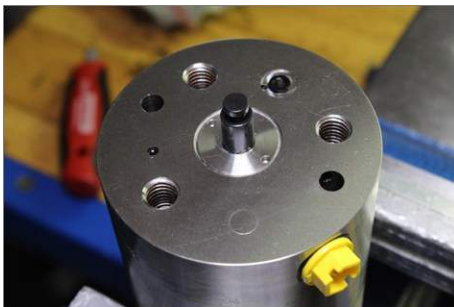


3.3.16

Inspect the piston for visual damages (scratches, wear marks).



If the surface of the pistons or the piston cylinders have any visible surface imperfections, the intensifier will not operate properly. The intensifier should be returned to the factory for refurbishment. If reassembled with damaged parts, the unit may operate, with a reduced effective intensification ratio, for a while, but will generally fail after a short period of operation and may no longer be serviceable.



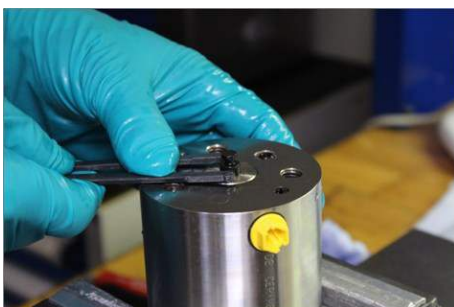
3.3.17

Insert the HP piston into the end part. Use a soft hammer to gently tap the piston into place. Note that the piston fits tight into the new seals. The piston should be pushed/tapped approximately half of its length into the end part.



3.3.18

Blow out the threads of the end part and apply new copper grease.



3.3.19

Release the end part (marked with D2 at the yellow plug) from the wise and clamp the other end part (marked with D1 at the yellow plug).

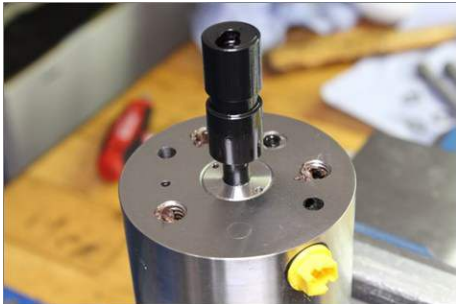
Install new seals into this part by using the procedure from section 3.3.6 to 3.3.18.

When the procedure has been carried out, continue to section 3.3.21.

**3.3.20**

Release the end part (marked with D1 at the yellow plug) from the vise and re-clamp the first end part (marked with D2 at the yellow plug).

Ensure that the SV-valve is inserted into the bore.

**3.3.21**

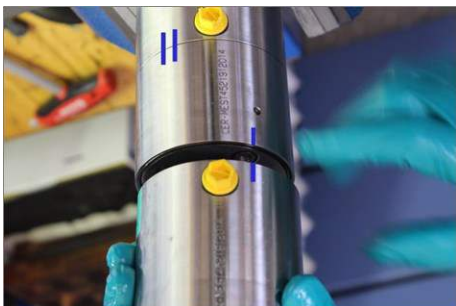
Connect the large piston to the HP piston.

**3.3.22**

Assemble the remaining new gaskets and O-rings into the middle part in accordance with the instructions drawing incorporated in the supplied seal kit.

It is recommended to grease all O-rings with a thin layer of silicone based grease. This will make them stick better into their corresponding grooves.

Slide the middle part onto the large piston.

**3.3.23**

Connect the remaining end part to the assembly.

**3.3.24**

Insert the screws and washers and align the three parts by tapping the bodies lightly.

**3.3.25**

Apply a torque of 70 Nm / 52 ft-lbs to the 3 M10 HEX bolts.

The seal replacement procedure is now finished.

4.1 - Installing the miniBOOSTER HC2D2W

The miniBOOSTER HC2D2W can be installed in any position. The preferred and recommended mounting position is with the intensifier horizontal and with the suction ports, S1 and S2, facing upwards.

Important notice: The media 2 fluid must be vertically higher positioned than the S1 and S2 suction ports. This ensures that the high pressure chambers in the booster are always flooded with liquid.

The HC2D2W can be used for two different modes of operation:

1. As a hydraulic driven High Pressure Pump increasing the pressure of a media 2, which is primed into the intensifier (S1 and S2 connections), and pumped out (H1 or H2 connections) through a nozzle, at a steady constant pressure set by the size of the nozzle and the pressure/flow of the media 1. The intensifier installed in this mode will oscillate/pump constantly during operation (i.e. for high-pressure spraying purposes etc).
2. As a hydraulic driven intensifier intensifying the pressure of media 2 up to a preset value set by the intensification ratio and the supplied media 1 pressure/flow. The intensifier installed in this mode will oscillate until the preset pressure is reached and then stall, until a consumption of media 2 causes the intensifier to start oscillating/intensifying again (this mode is for filling up hydraulic cylinders, accumulators etc.)

It is recommended to connect a transparent drain hose between the D1 and the D2 connections and the system return line, alternatively a sight glass connected to a sludge tank etc.



Under no circumstances should the D1 and the D2 connections remain plugged during the operation of the HC2D2W, since this could lead to damage of the internal components of the intensifier, and a pollution of media 1 from media 2.



Regardless of how the miniBOOSTER HC2D2W is installed, it is important that the HC2D2W is installed in accordance with the below mentioned "Preparations" and "Initial start-up" instructions.

4.2 - Preparations

Before the first start-up of miniBOOSTER HC2D2W as a new unit or as a repaired unit, it should be ensured that the:

1. Filtering recommendations (see index 1.10) do comply.
2. Fittings, piping and hoses connected to the intensifier high-pressure side (H1 or H2) consist of materials, which will withstand the high pressure supplied from the HC2D2W.
3. Media 2 circuit has been completely bled from trapped air, and that there is a sufficient flow of media 2 supplied to the intensifier.



Trapped air should be bled from the internal media 2 circuits thus preventing the HP pistons and the HP seals to run under dry conditions. Air should be bled by priming the media 2 suction lines (S1 and S2) with pressurised media 2 until the HP sections are completely bled from air, i.e. media 2 flows from the H1 or the H2 connections without any air bubbles in it. We recommend to handle this by loosen either the adapter or the plug (or both) in H1 and H2 connections.

4. Media 1 flow (IN connection) is adjustable and is adjusted to 0.
5. Check that the drain connections (D1 and D2) are unplugged and connected to a drainage system.

4.3 - Initial Start-Up Procedure (after preparations are carried out)

Mode 1 installation (HC2D2W installed as a High Pressure Pump)

1. Slowly increase the pressure/flow of the media 1 supplied to the HC2D2W. Observe that the intensifier starts oscillating when the supplied pressure reaches 20 - 30 bar / 290 - 435 psi.
2. Observe that the intensifier oscillates with a steady pulsing sound- and with a stroke-rate within the specifications (see section 1.10).
3. Increase the pressure/flow of the media 1 observing that the pressure of the media 2 increases proportionally. Ensure that the specified stroke-rate is not exceeded at any time.
4. Check that no media 1 or 2 is leaking from the connections D1 and D2 (up to 8 drops /minute should be accepted).

Mode 2 installation (HC2D2W installed as a pressure intensifier)

1. Slowly increase the pressure/flow of the media 1 supplied to the HC2D2W. Observe that the intensifier starts oscillating when the supplied pressure reaches approximately 20 - 30 bar / 290 - 435 psi.
2. Observe that the intensifier oscillates with a steady pulsing sound- and with a stroke-rate within the specifications (see section 1.10).
3. Increase the pressure/flow of the media 1 observing that the pressure of the media 2 increases proportionally. Ensure that the specified stroke-rate is not exceeded at any time.
4. Operate the cylinder/accumulator to its end position.
5. Move the cylinder/accumulator between its end positions a couple of times, as to completely bleed the system from trapped air.
6. Check whether the pressure of media 2 is reached. If not then adjust the pressure of media 1 once more.



IMPORTANT! At no time should the intensifier be operated beyond the specifications listed in Section 1.10.

5.1 - Introduction

The miniBOOSTER HC2D2W intensifier has been designed and is manufactured to provide reliable service over a range of demanding applications. The intensifier does not require special maintenance, but should be kept free from dust and dirt and debris.

In case the HC2D2W should malfunction, all repairs of the product should be conducted by using miniBOOSTER original spare parts only, and the instructions provided in this manual should be strictly followed.

Before the miniBOOSTER is disconnected and sent for repair, the exterior should be thoroughly cleaned. Once the HC2D2W has been disconnected, all connection bores should immediately be plugged efficiently with plugs or tape, before the intensifier is sent to miniBOOSTER or to the miniBOOSTER distributor, since an internal contamination of the HC2D2W may obstruct the fault-finding process at the miniBOOSTER service department.

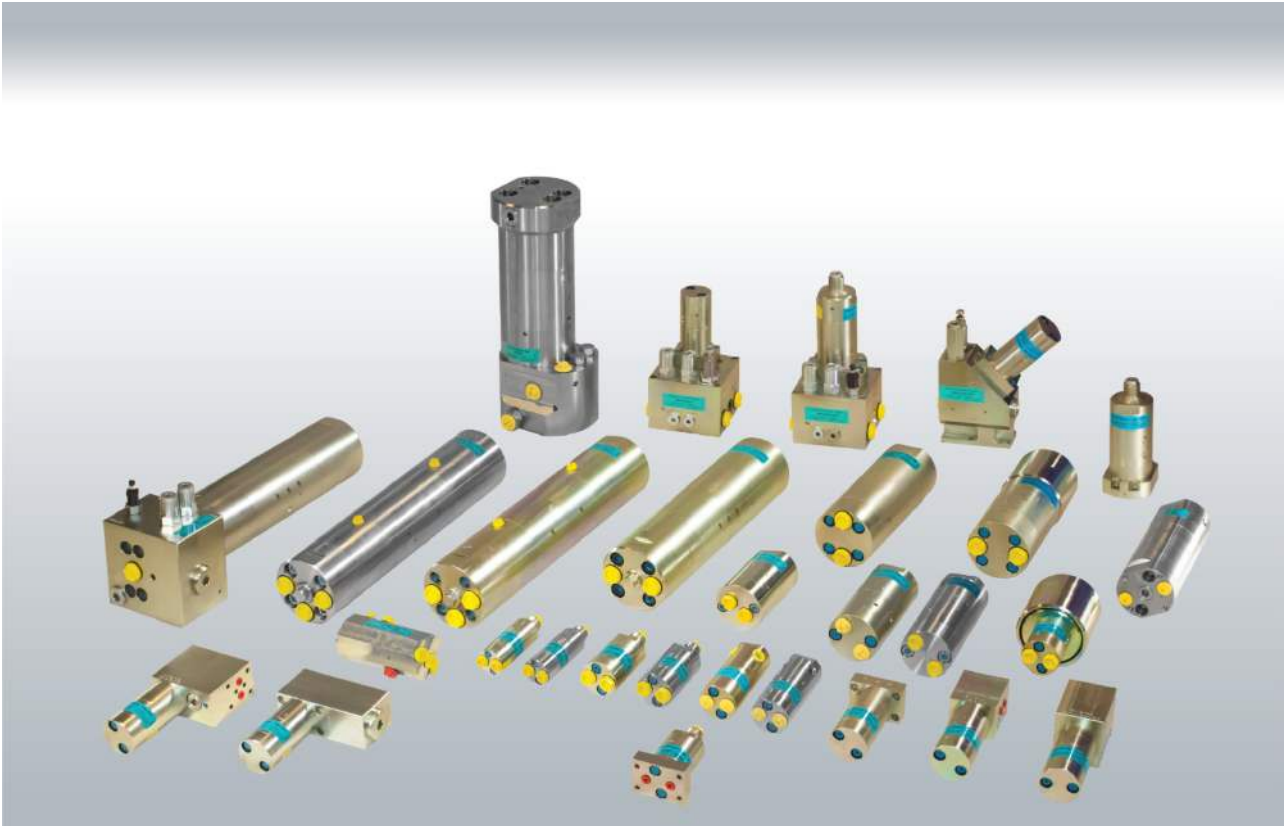
5.2 - Inspection

A visual inspection for media escaping from drain holes D1 or D2 should be conducted on a regularly basis. The purpose of the drain holes (see their routing on the function diagram) is to enable the user to visually inspect whether the internal dynamic seals of the HC2D2W have become worn or scratched for some reason, or if these are fully functional. The maximum permissible amount of media escaping from D1 or D2 is 8 (eight) drops per minute. If this amount is exceeded the HC2D2W should be repaired with new seals or returned to miniBOOSTER for repair. Any changes in the normal behavior/run of the HC2D2W, i.e. slow or difficult starting etc., should be a sensible reason for having the intensifier repaired immediately.

6.1 - Troubleshooting

Symptom	Possible Causes	Remedy
Media 2 pressure (H1 and H2) not existent	No supply of media 2 to port S1 and S2 Intensifier doesn't oscillate Air trapped in the media 2 circuit Suction filter Clogged	Establish supply and bleed circuit See below Bleed the media 2 circuit Change filter element
Intensifier doesn't oscillate	Port R plugged Port R pressure too high Pressure on IN < 20 bar Intensifier piston seized Intensifier cylinder seized Intensifier seals seized Bistable valve system seized Preset max HP (H1 and H2) reached	Establish a flow from R to tank Reduce pressure to max 5 bar Increase media1 pressure Return intensifier to miniBOOSTER Return intensifier to miniBOOSTER Change out the seals Return intensifier to miniBOOSTER Normal situation (intensifier stalls)
Excessive flow of media from D1 and D2	LP seals defective HP seals defective HP pistons scratched or worn	Change out the seals Change out the seals Return intensifier to miniBOOSTER
Media1 has been polluted with media 2	D1 and D2 plugged/clogged	Unplug and establish a free flow
Reduced capacity of the intensifier	Air trapped in media 2 circuit Defective HP seals Defective HP pistons Defective HP cylinders	Bleed the circuit Change out the seals Return intensifier to miniBOOSTER Return intensifier to miniBOOSTER
Media 2 pressure builds up very slowly	Air trapped in media2 circuit Defective HP seals Defective HP pistons Defective HP cylinders Poor filling with media 1	Bleed the media 2 circuit Change out the seals Return intensifier to miniBOOSTER Return intensifier to miniBOOSTER Ensure sufficient filling of intensifier
Media 2 pressure won't build up	Air trapped in media 2 circuit LP seals defective HP seals defective HP pistons scratched or worn HP pistons seize under pressure Too low pressure of media 1	Bleed the media 2 circuit Change out the seals Change out the seals Return intensifier to miniBOOSTER Return intensifier to miniBOOSTER Check pressure of media 1
Effective intensification ratio reduced	HP seals defective HP pistons scratched or worn HP pistons seize under pressure	Change out the seals Return intensifier to miniBOOSTER Return intensifier to miniBOOSTER
Unsteady pulsing sound from intensifier	Trapped air in 1 media 2 circuit	Bleed the media 2 circuit
Hard metallic sound from intensifier	Trapped air in 1 or 2 media 2 circuits Intensifier over speeding	Bleed the media2 circuit (S1 and S2) Reduce media 1 pressure/flow (IN)
Intensifier over speeding consequently	Trapped air in 1 or 2 media 2 circuits	Bleed the media 2 circuit
LP and HP seals wears rapidly	Filtering recommendations do not comply Intensifier working under too warm conditions Intensifier over speeding	Ensure proper filtering of mediums Ensure proper cooling of intensifier Reduce speed
LP and HP cylinders worn rapidly	Intensifier working under too warm conditions	Ensure proper cooling of intensifier
Intensifier overheats	Filtering recommendations do not comply Too high working pressures Too warm mediums entered into intensifier HP pistons seizing under high pressure Warm operating environment	Ensure proper filtering of mediums Check/reg pressures (see specs) Check/reg temperatures (see specs) Return intensifier to miniBOOSTER Cool the intensifier with water or oil
None of the above symptoms		Consult miniBOOSTER

The only full range of hydraulic intensifying solutions



Authorised distributor:

Approved By: L. Hansen

Date: 23-02-2026