


Instructions for hydraulic booster HC78W



www.minibooster.com

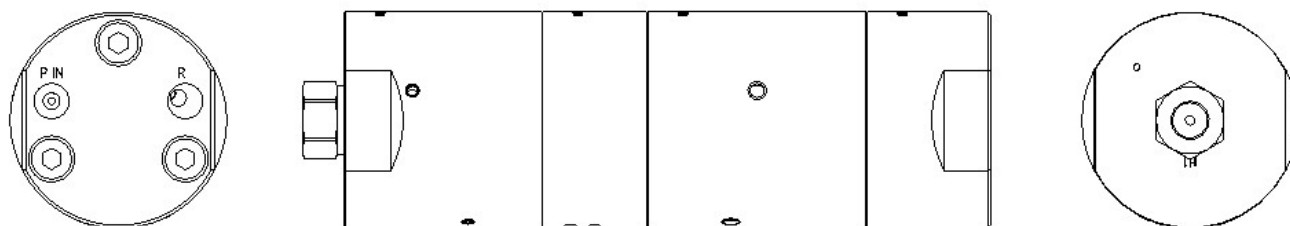

IN		R		H
1/4"	7/16-20	1/4"	7/16-20	- Adapter connectors -
BSPP	UNF	BSPP	UNF	See HC7W homepage
Drawing: 7W-900-__				
DK Forskrkning, Pumpetilslutning				
UK Screwed connection, Pump connection				
DE Verschraubung, Pumpenanschluss				
FR Raccordement, Raccordement de pompe				

Max. Tilspændingsmoment—Max. Tightening torque Max. Anzugmoment—Couple de serrage max				
DK Med stålskive	1/4" BSPP			
UK With steel washer				
DE Mit Stahlscheibe	40 Nm 29.5 lb·ft			
FR Avec rondelle en acier				

DK Med aluminiumskive	1/4" BSPP			
UK With aluminium washer				
DE Mit Aluminiumscheibe	30 Nm 22 lb·ft			
FR Avec rondelle en aluminium				

DK Med skærekant	1/4" BSPP			
UK With cutting edge				
DE Mit Dichtkante	40 Nm 29.5 lb·ft			
FR Avec rondelle en acier				

DK Med O-ring	7/16-20 UNF	9/16-18 UNF
UK With O-ring		
DE Mit O-ring	20 Nm	35 Nm
FR Avec joint torique	14.8 lb·ft	25.8 lb·ft

i	Max. flow IN		Max. flow H		Max. pressure IN		Max. pressure H	
> 5 cSt	l/min	gal/min	l/min	gal/min	bar	psi	bar	psi
1.8	12	3.2	4.2	1.1	207	3,000	372	5,400
2.4	13	3.4	2.7	0.7	207	3,000	497	7,200
4.0	14	3.7	2.0	0.5	207	3,000	828	12,009
6.3	13	3.4	1.4	0.4	207	3,000	1,304	18,900
< 5 cSt	l/min	gal/min	l/min	gal/min	bar	psi	bar	psi
6.3	13	3.4	1.4	0.4	164	2,380	1,035	15,000

DK

Trykforstærkeren kræver et pumpetryk på minimum 20 bar / 300 psi. Filtrering: Se side to. Komponenter må ikke tages i brug, før maskinen, hvori den monteres, overholder alle relevante bestemmelser i EU og EFTA.

UK

The minimum inlet pressure required to operate the booster is 20 bar / 300 psi. Filtration: See page 2. Do not put the component into operation until the machine into which it is mounted complies with all relevant regulations and directives by the EU and EFTA.

DE

Der Druckverstärker funktioniert ab einem Eingangsdruck von 20 bar / 300 psi. Filtrierung: Siehe Seite zwei.



Die Komponente nicht in Betrieb nehmen, bis die Maschine, in die sie eingebaut werden muss, alle relevanten Regularien und Direktiven von der EU und EFTA erfüllt.

FR

Le multiplicateur fonctionne avec une pression minimale de 20 bar / 300 psi. Filtration: Voir la page deux. Avant de mettre en service le composant monté, la machine doit être conforme à toutes les réglementations et directives en vigueur dans l'UE et l'AELE.

IMPORTANT: Directional control valves

Contaminated fluid can cause the internal check valves of the booster to leak high-pressure media back to the IN and R connection. When high pressure (>207 bar / 3,000 psi) is trapped between the booster and the directional valve, the bolts can be stretched and cause the booster to leak fluid. miniBOOSTER recommends to use an open center valve to prevent this.

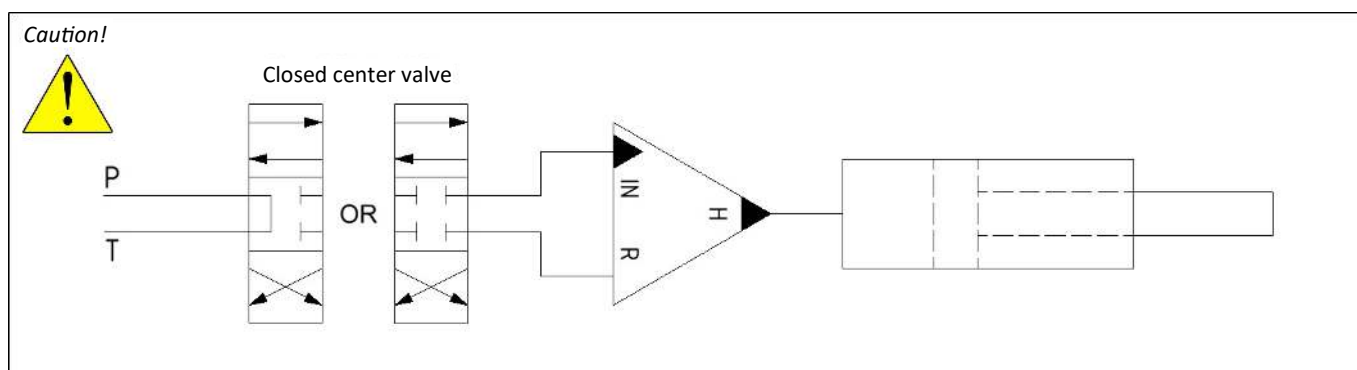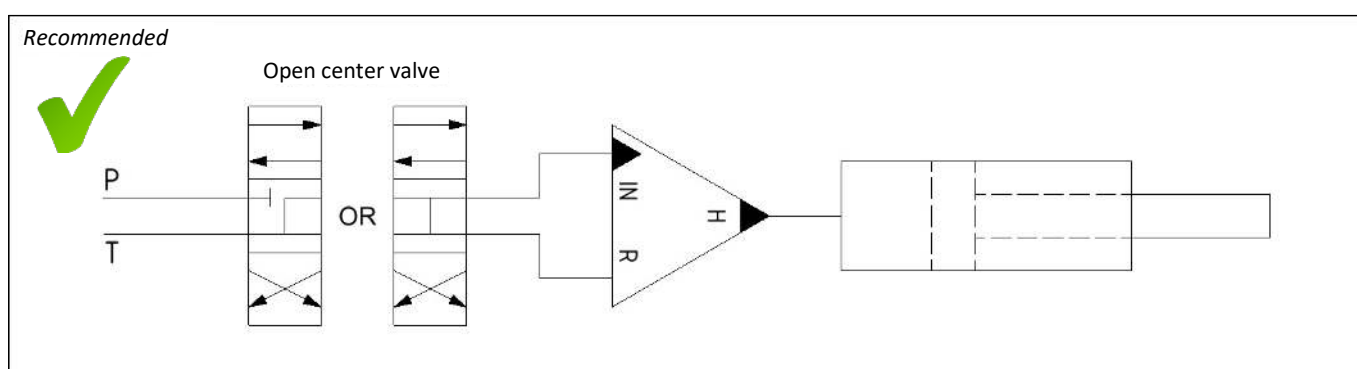

Recommended filtration: According to ISO 44306



		0 to 140 bar 0 to 2,000 psi		141 to 207 bar 2,000 to 3,000 psi	
Media		ISO Taget Levels	Micron Ratings	ISO Taget Levels	Micron Ratings
Oil	> 5 cSt	19/17/14	10	18/16/13	5
Water/Water Glycol	< 5 cSt	18/16/13	5	17/15/12	3